





## CABINET MOUNTING WOODWORKING SCREWS

For attaching cabinets to wood or  
light gauge (25-20 gauge) steel studs.

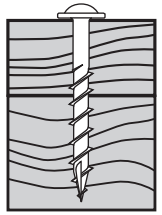

COMBO Drive

### Product Specifications

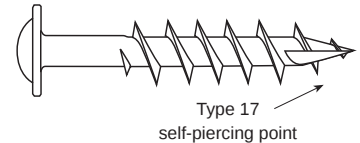

| Part # | Dia. | Length | TPI | Bulk Qty | Finish      | Head         | Head Diameter  | Corrosion         | Point   |
|--------|------|--------|-----|----------|-------------|--------------|----------------|-------------------|---------|
| CBS238 | 8    | 2-3/8  | 14  | 2.5M     | Yellow Zinc | Round Washer | 9.25mm ~ 9.8mm | 48 hr. min. B-117 | Type 17 |
| CBS300 | 8    | 3      | 14  | 2M       | Yellow Zinc | Round Washer | 9.25mm ~ 9.8mm | 48 hr. min. B-117 | Type 17 |

**Woodworking Screws Ultimate Value Chart - Fastener Properties**

| Dia. | Shear Strength (lbs) | Tensile Strength (lbs) | Minimum Torisional Strength (lbs) |
|------|----------------------|------------------------|-----------------------------------|
| 8    | 1340                 | 1800                   | 39                                |

**Woodworking Screws Ultimate Value Chart - Pull Out**

| Dia. | Pull Out - Pine to 25 ga. Steel (lbs) | Pull Out - Pine to 20 ga. Steel (lbs) | Pull Out - 2x4 Fir Wood (lbs) |
|------|---------------------------------------|---------------------------------------|-------------------------------|
| 8    | 878                                   | 888                                   | 334                           |

#### Ultimate Value Charts

Wood - Screws driven 3/4" into the wood material, then pulled out the testing machine.

Steel - Screws driven into steel were driven with three exposed threads on the off side of the connection, then pulled out with testing machine.

Note that all results were obtained in strict adherence to ASTM test protocol. These ultimate figures are offered only as a guide and are not guaranteed in any way by PrimeSource. A 4:1 safety ratio is recommended.

#### Installation Guidelines

0-2500rpm Screwgun with torque adjustment - Overdriving may result in fastener failure or stripout of the work surface

The fastener is fully seated when the head's bearing surface is flush with the cabinet.

NOT Recommended for use with treated wood.

ALL PRIMESOURCE FASTENERS ARE MANUFACTURED IN AN ISO 9002 AND ISO 14001 CERTIFIED AND APPROVED FACTORY TO PRIMESOURCE PERFORMANCE SPECIFICATIONS AND PRINT DRAWINGS.